


EX CLAMP

SET UP

The Ex-Clamp is a versatile bracket which can be attached to any pole with a diameter of 50mm to 300mm. The Ex-Clamp can be used with the Ex-Disc, Flying, Feather and Wing banners.

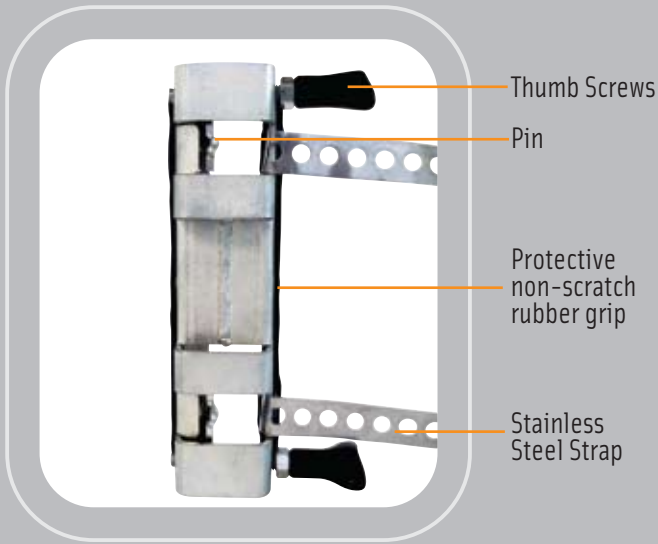

1 Hold the bracket with the thumb screws on the right. Ensure the bar with the pin is positioned on the far left.



2 Position the clamp onto the pole with the straps. Position the rubber grips in a way so when tightening the clamp they will assist with the grip on the pole.




3 Wrap the strap around the pole and hook the closest hole onto the pin on the clamp.



4 **To tighten the clamp onto the pole, fasten the top and bottom evenly.**

It is best to alternately turn the top knob twice, then the bottom knob twice.

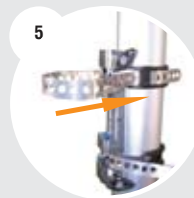

5 Continue wrapping the rest of the strap around the pole and keep hooking the closest hole onto the pin and sliding the straps inside the rubber grips. Remember to tighten each thumbscrew after each wrap around pole.

ATTACHMENTS FOR THE EX-CLAMP

ANGLED ROTATING SPINDLE



Angled Rotating Spindle (590005450)

- For displaying Small and Medium Flying, Feather or Wing Banners.

NEW

ANGLED ECO BANNER MOUNT



Angled Eco banner Mount (590005500)

- For use with Eco-Flying Banners, Eco- Feather Banners and Eco-Wing Banners

NEW