

WIND-UP BANNERS



SETUP



Holding the aluminum pole, wind the handle in a clock-wise direction.



As the legs extend, ensure that the banner is adequately lifted to allow the legs to open out.



Continue to wind until the fabric becomes taut and firm.

TAKE DOWN



To retract the banner, turn the handle in an anti-clockwise direction and allow the bottom legs to fully retract.

Do not continue to crank if the handle becomes stiff.

Please note:
As the legs retract, make sure the fabric doesn't get pinched in the mechanism.



Store in compact carry bag for easy portability

