





EXDISC

CHANGING THE IMAGE

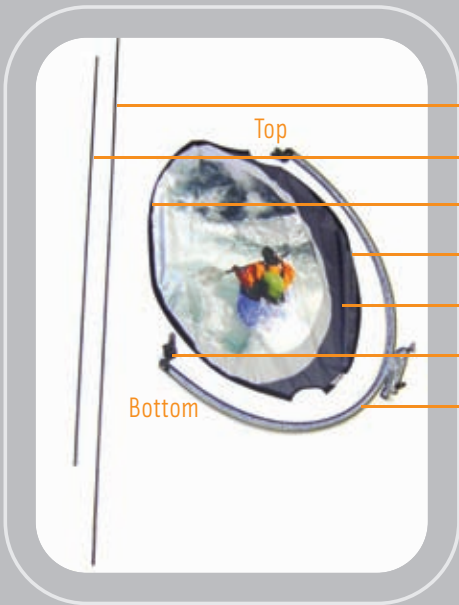

- Long rod
- Short rod
- Long sleeve
- Short sleeve
- Skin/Image
- Sockets
- Frame

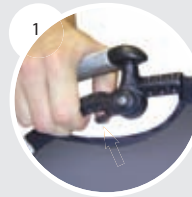

1 Squeeze the lever to release the catch on the rods.
Repeat on the opposite side.



2 Fold the Ex-Disc by pulling the outer side of the banner in towards the frame. The rods will twist and come together.



3 Remove the rods from the brackets on both sides of the frame.
Remove the rods from the sleeves on the skin.



4 Slide the long rod into the long sleeve of the new skin.
Slide the short pole into the short sleeve. They will bend into a curve with the sleeve and take the shape of the disc.



5 Make sure that the image is the correct way up by inserting the long and short rods that come out at the top of the image into the sockets on the top of frame that is labelled top.



6 Insert the long rod into the top socket on the frame. Repeat, inserting the other end of the rod into the top socket on the opposite side of the frame.



7 Insert the short rod into the bottom socket on the frame. Repeat, inserting the other end of the rod into the bottom socket on the opposite side of the frame.



8 See Assembly leaflet.