


REPLACING CANOPY INSTRUCTIONS


All replacements to be carried out while still folded

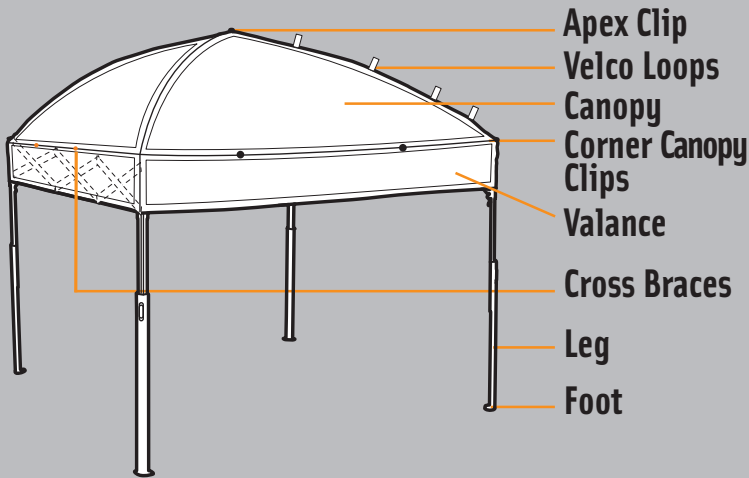

Corner Canopy Clips (x4)

Apex Clip (x1)

1 Apex Clip

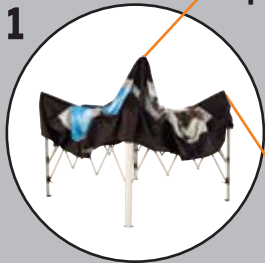

REMOVAL OF CANOPY

Extend the frame until all the legs are approximately 1m apart. Remove the Corner Canopy Clips at the top of the leg.

Corner Canopy Clip



Remove the Apex Clip by pushing up from underneath the fabric at the top of the leg. The clip will pop out easily. Repeat on all legs.



There are four velcro loops on each fiberglass rod that attach the rods to the fabric. Release each velcro loop.



To remove the Apex Clip, pinch the underside of the clip and pull up.



RE-ATTACHING CANOPY


Begin at the centre of the fabric. Line the metal eyelet up to the centre roof knuckle and insert the Apex Clip.



Align each corner Top Cap with the corresponding eyelet. NOTE: Before inserting the Top Cap Clip, attach the velcro loops to the fiberglass rods. It's very important that the first two velcro pieces are attached, as per the diagram (the balance of the loops can be attached once the Ex-Dome is fully erected.)



To attach the fabric to the leg, use the Corner Canopy Clips. Match the eyelet on the fabric to the hole in the top of the leg. Insert the Corner Canopy Clip and click into place. Repeat on each leg.

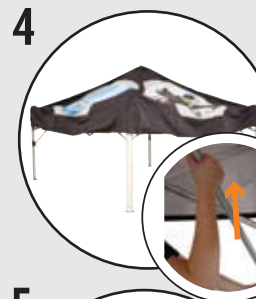

Pull the cross braces to extend the frame until the legs are 3m apart. With one foot on the base plate, place your hand on the 45° strut coming out from the leg. Push upwards until the top slider reaches the stop and lower the red lever to lock in place.



Step inside the Ex-Dome and attach each fiberglass rod using the velcro loops on the fabric.